


STAR-6: Community WiFi Internet kit

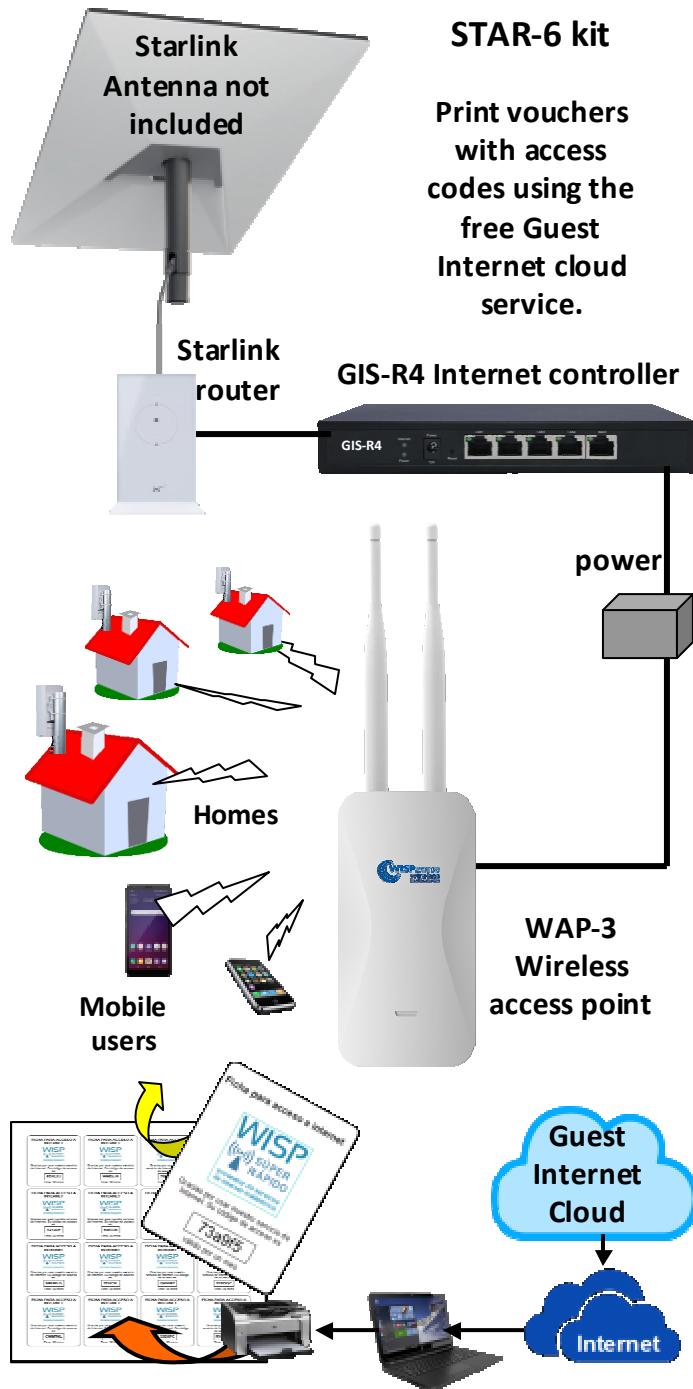

You provide the Starlink antenna for the Internet access, and use Guest Internet products to share the service with your community.

STAR-6 is a kit that provides wireless Internet access to homes and mobile devices when connected to a Starlink antenna.

- Share or sell an Internet service to a community using Guest Internet to manage the Starlink service.
- Everything you need in one kit to start providing a community Internet service using your Starlink antenna.
- Easy self-install and management of the Internet service, you do not depend on others.
- Full installation instructions included.
- Multi-language: English and Spanish.
- Print vouchers with access codes to give people access: duration, data speed and data limits.
- Monitor users of the Internet service.
- Monitor the service for failures: get alerts.
- Protection from abuse of the Internet service; prevents unauthorized Internet access.
- No other fees, maintenance, license, software, services or contracts.
- Free support, free upgrades.
- Free cloud service; manage the Internet from anywhere.
- Branding is easy to customize your Internet service.

Kit Contents:

GIS-R4 Internet controller with power supply
WAP-3 outdoor wireless access point
Power over Ethernet supply
Ethernet cables
Free cloud account access
Installation instructions

The Starlink antenna is not included with the kit.

Copyright (c) Guest Internet: Fire4 Systems Inc., 2005 to 2024. All Rights Reserved

For more information contact: support@guest-internet.com

Introduction: how to provide a community Internet service

Anyone wishing to provide an Internet service to a community requires some technical knowledge to install the infrastructure that will connect the Internet service. Guest Internet makes this easy by providing kits with the parts required and detailed instructions to install and configure the equipment.

The community members who want to connect to the Internet service will use a wireless technology called WiFi. A WiFi network must be installed to deliver the WiFi service to the community members.

If the reader wants to read more and get a deeper understanding of the process to deliver WiFi Internet to community members, we have two free e-books that can be downloaded using these links. The links are also on our website.

How to sell Internet mobile broadband:

[https://guest-internet.com/pdfs/How to sell Internet mobile broadband \(ENGLISH\) - J Barker.pdf](https://guest-internet.com/pdfs/How to sell Internet mobile broadband (ENGLISH) - J Barker.pdf)

How to start a WISP business:

[https://guest-internet.com/pdfs/How to start and build a WISP \(ENGLISH\) - J Barker 2022.pdf](https://guest-internet.com/pdfs/How to start and build a WISP (ENGLISH) - J Barker 2022.pdf)

There are two types of Internet customers;

- Mobile broadband: people with mobile devices who connect to a WiFi Hotspot antenna to get Internet access. The mobile users have to be within 100m to 200m of the Hotspot antenna.
- Fixed wireless access: People in homes connect to the WiFi antenna using an antenna on the roof of the home. The roof antenna then connects to a wireless router in the home. Home users can connect over 1Km when there is a clear line of sight from the home antenna to the WiFi antenna.


The network infrastructure that will provide the Internet service to community members has four parts.

- The Internet service provider. This is the Internet connection that is shared with community members and can use any of the following technologies; ADSL, cable, fiber, wireless point-to-point, geo-stationary satellite, or low earth orbit (LEO) satellite. The Starlink Internet service uses LEO satellites. Ensure that the sharing of the service with the community is within the terms and conditions of the ISP.
- User controller. This is the Guest Internet controller that will manage the access to the Internet service so that many people can share one Internet connection. Use the Guest Internet product to print vouchers where each voucher has a unique access code with parameters of duration of access, maximum upload and download data speeds, maximum upload and download data limits, and the number of people who can use the code, usually 1. The Guest Internet controller shares the Internet service so that a problem called network congestion is avoided, and also ensures that the ISP data volume limits are not exceeded.
- Point to multi-point (PtMP) wireless access point (WAP). This wireless product broadcasts the Internet access as a WiFi wireless signal. Community members who want to get access to the Internet have to connect to this antenna. This


antenna must be visible for any person wishing to connect to it; the connection is called line-of-sight. Any obstruction such as a building or tree will block the signal. Community members with mobile devices can connect to this antenna by selecting the WiFi name. The maximum distance of the connection to a mobile device might be in the range of 100m to 200m.

- Homes are connected with wireless equipment that gives a much longer communication distance. A wireless receiver (called a client premise equipment – CPE) is installed on the roof of the home and points to the PtMP antenna. The PtMP antenna must be visible from the location of the CPE antenna. The distance from the CPE antenna to the PtMP antenna can exceed 1Hm. The CPE antenna connects to a wireless router inside the home and residents connect to the wireless router using WiFi to get access to the Internet.


The network equipment described above is shown in the next diagram. All community Internet services that connect people using WiFi have this design.

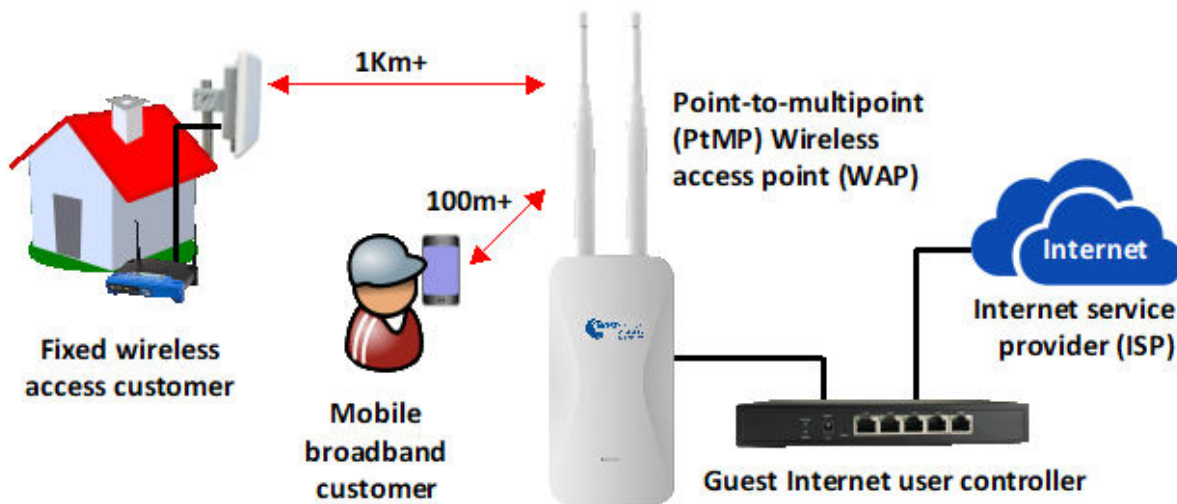


A community member who wishes to access the Internet must request or purchase a voucher that has an access code. The person who manages the Internet service prints the vouchers. The voucher is designed using the Guest Internet controller or cloud service and can include a logo plus text. Vouchers are printed on any letter printer. The process of printing vouchers is shown in the next diagram.

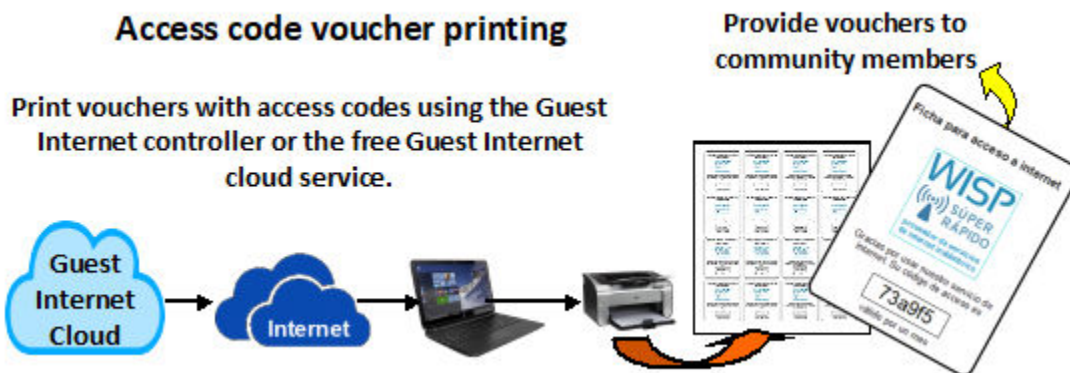

A community Internet service is shown in the next figure. The PtMP antenna is installed on a high point in or close to the community so that all members of the community can see the antenna. The installation might be on a hill, a tall building or a tower. When Starlink is the ISP service then the Starlink antenna is installed close to the PtMP antenna also at a high point so that the Starlink antenna has 180 degree visibility of the sky. The PtMP antenna connects to the Guest Internet controller, which controls access to the Internet. The Guest Internet controller connects to the Starlink router. The antenna on each home points to the PtMP antenna.

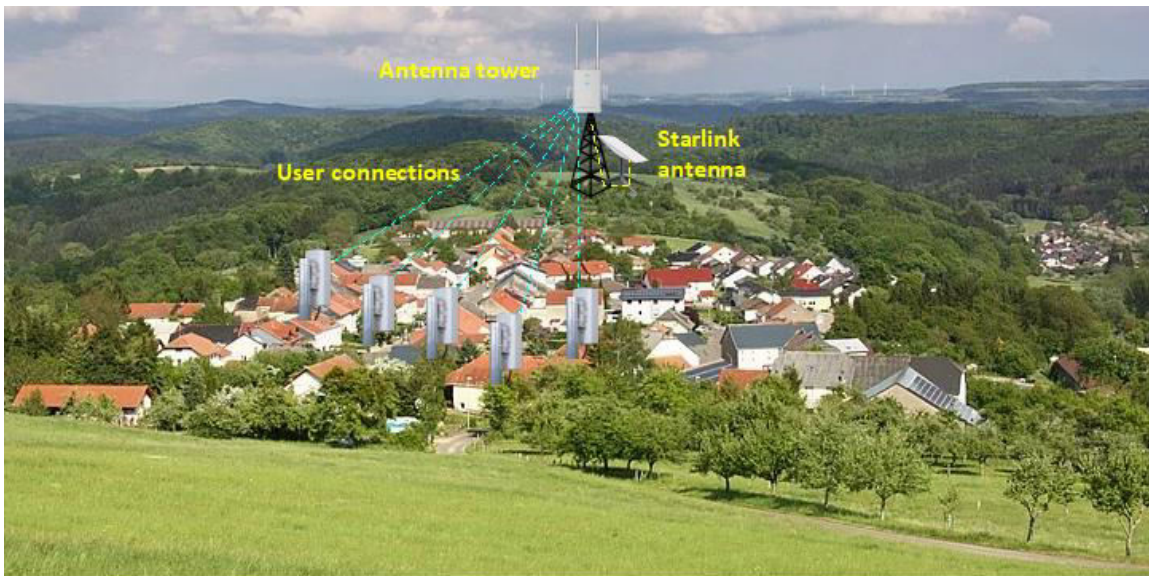


The installation with the Starlink antenna is shown in the next diagram.

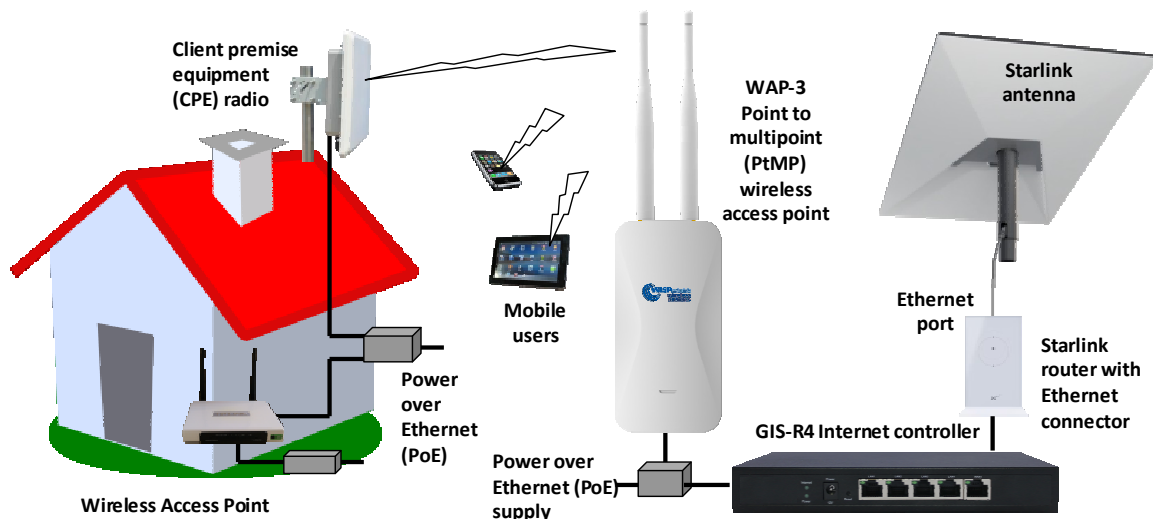


A location that is ideal for the antenna installation may not have power, and so the installation can be powered using solar panels. A solar panel with battery and charger system with a rating of 500 Watts is required to power the Starlink antenna, the Guest Internet controller and the PtMP antenna.

The community member with a mobile device who wants to connect to the Internet service must first get a voucher with an access code.

The next step is to connect the mobile device WiFi to the PtMP antenna by selecting the name of the WiFi (the SSID) using the mobile device.

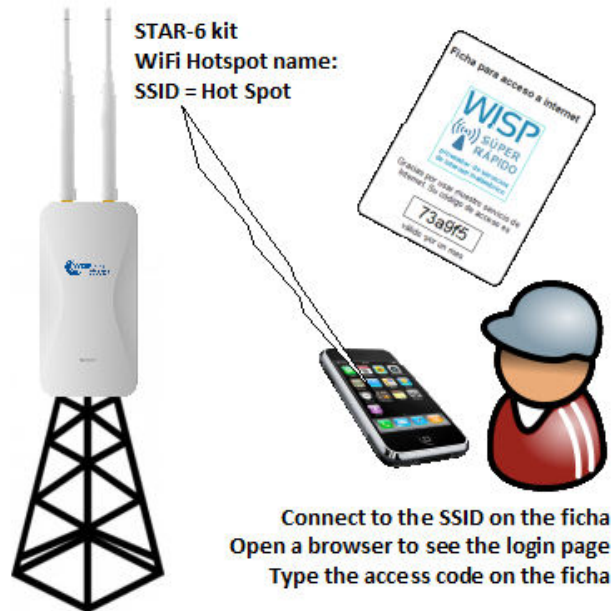

The next step is to open a browser to see the login page, an example of a login page is shown in the next figure.

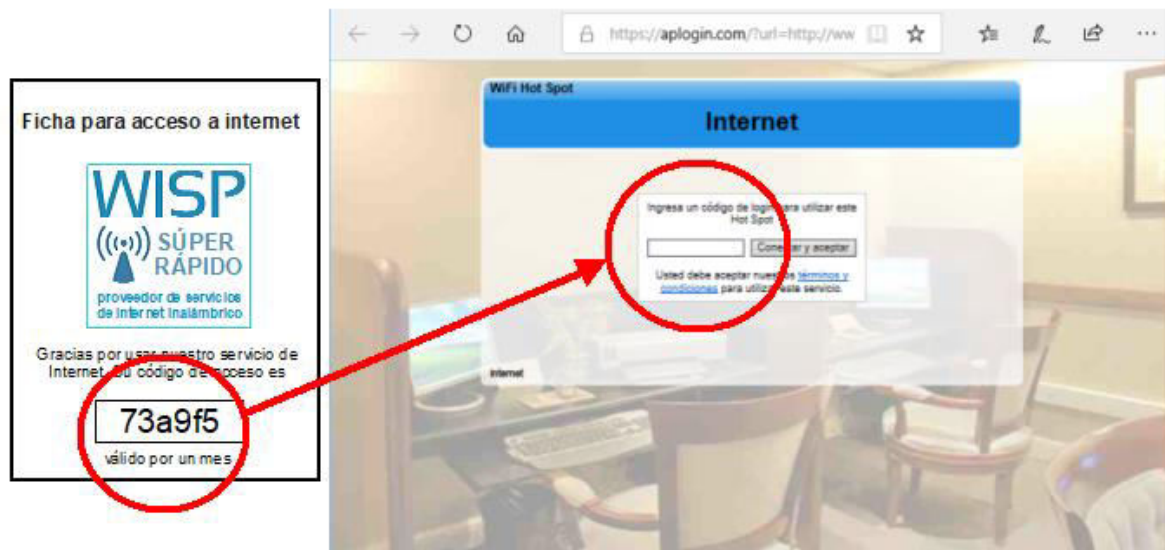

The code on the voucher is typed into the login page then the button is clicked. If the code is valid then the person gets access to the Internet.


Contents of the STAR-6 kit

The STAR-6 kit connects to a Starlink antenna or any other Internet service and provides a controlled WiFi Internet service that can be provided for, or sold to a community. The STAR-6 kit shares the Internet service between many people.

There are two products included with the STAR-6 kit

- The GIS-R4 Internet controller: this controls the Internet access, generates access codes and prints vouchers with access codes that can be sold to members of the community.
- The WAP-3 wireless access point is a powerful outdoor wireless WiFi transmitter that should be installed at a high point for the maximum range of transmission.

The diagram shows how the products are connected together. The Starlink antenna is not included.

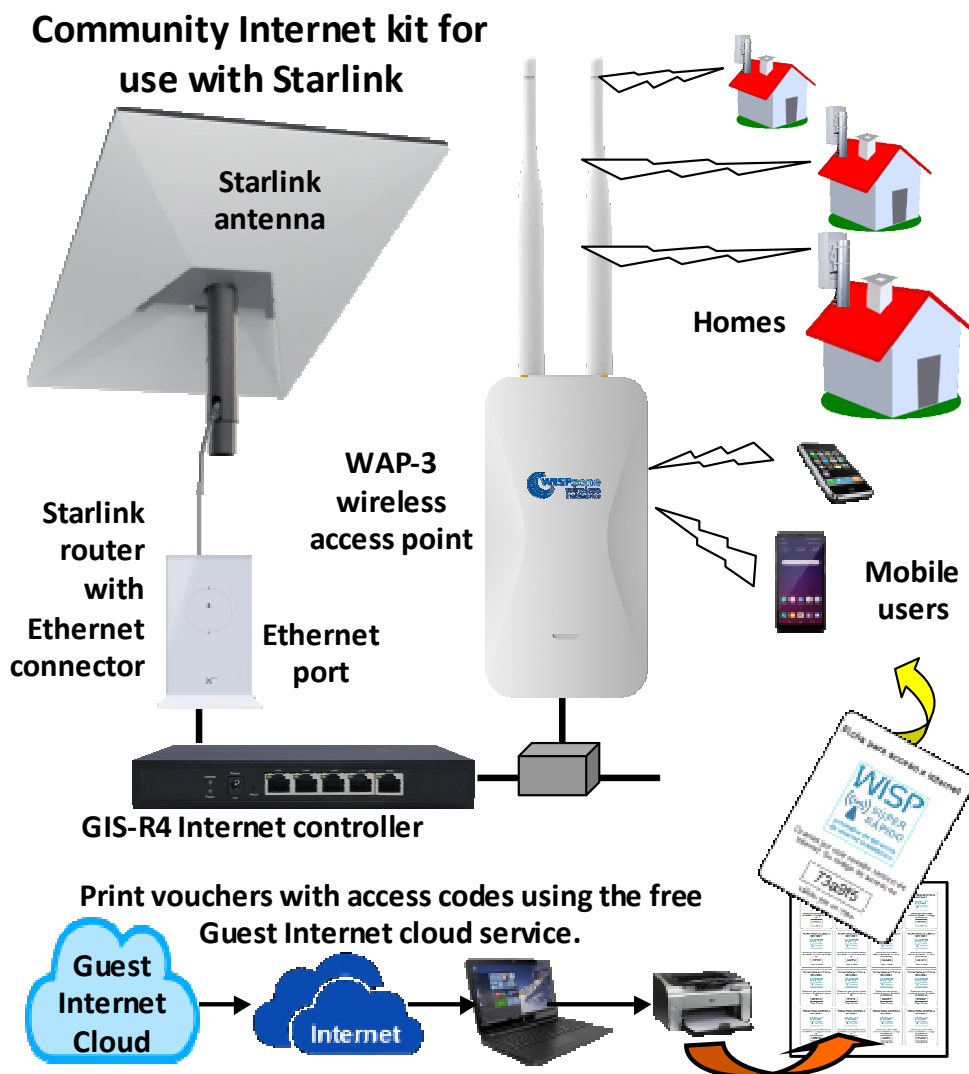

First configure the GIS-R4 Internet controller

The GIS-R4 product includes the quick-start guide in Spanish and English. Please read the quick-start guide before proceeding.

Please download the product manual using this link.

[https://www.guest-internet.com/pdfs/GIS_product_manual_\(English\)_1.1.24.pdf](https://www.guest-internet.com/pdfs/GIS_product_manual_(English)_1.1.24.pdf)

Or open our website and click on the manual link at the top right of the page.

www.guest-internet.com

Have the manual available and consult when you need more information about the steps in this document. This document describes the features required to start providing an Internet service to community residents. There are many other features such as failure monitor that can be enabled. Consult the manual to find out how to configure these features.

The GIS-R4 must be connected to the Internet to configure the product. Connect your computer to the GIS-R4 LAN1 port using an Ethernet cable as shown in the next diagram.




With your computer LAN port connected to the GIS-R4 LAN1 port open the computer browser, type 'aplogin.com'

The quick start wizard screen will open, like the screen shown in the figure.



First, select the language flag top right, English or Spanish

Click the button to proceed.

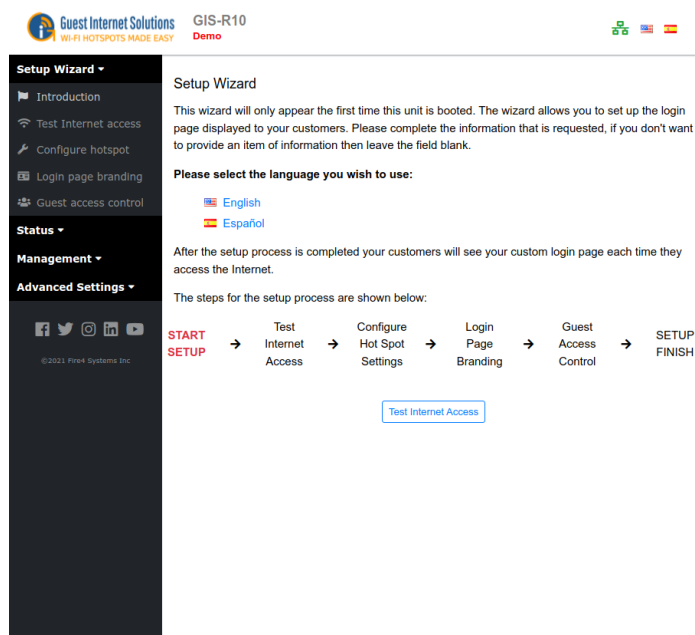

Verify that the GIS-R4 has an Internet connection, the network figure next to the flag at the top right must be green, if it is red then stop and get an Internet connection. The setup procedure can only continue with an Internet connection.

Next enter a strong password to prevent unauthorized access, make a note of the password.

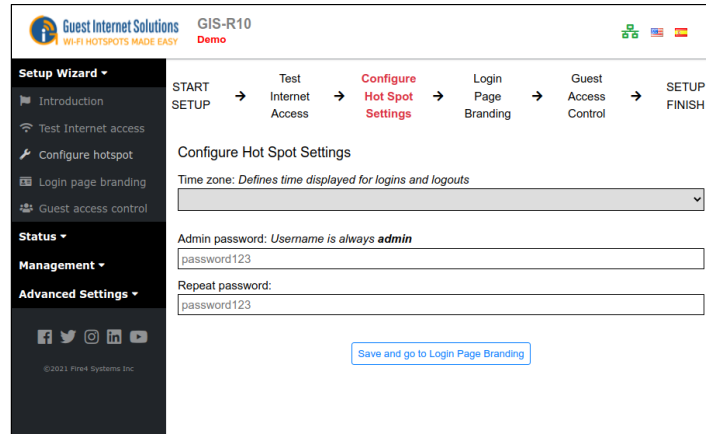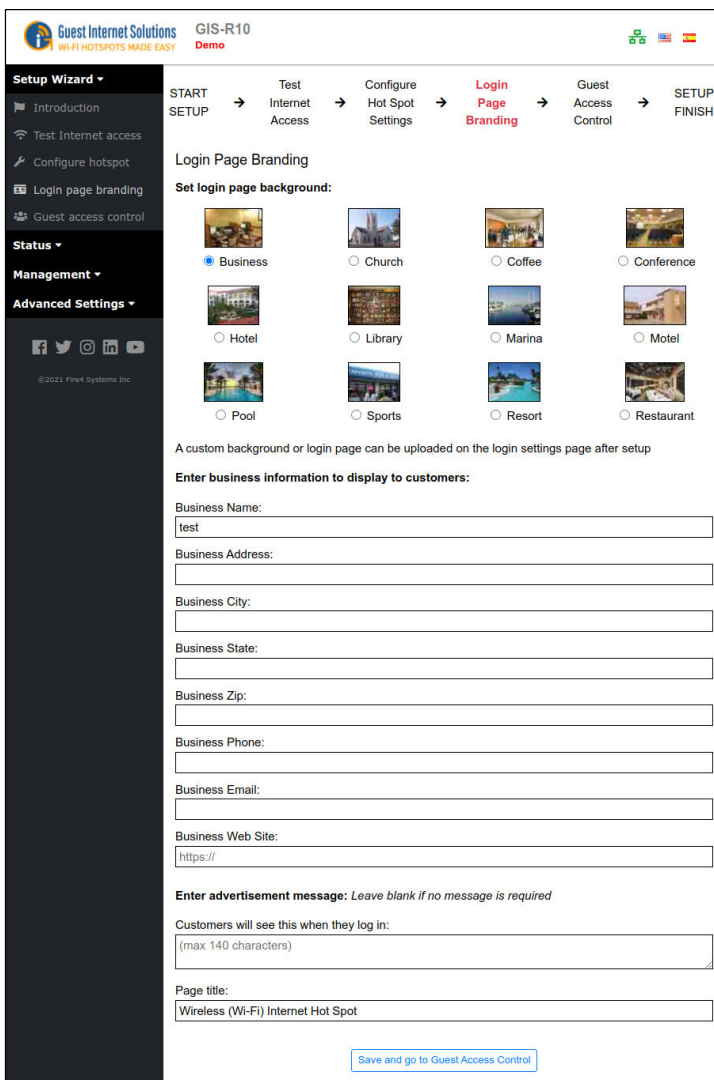The next step is to configure the login screen. Select the background and enter the information requested.

This page will display your information in the captive portal. If you want to sell Internet access then explain where the access code vouchers can be purchased.


You can add announcements and other information about your service.

Click the button at the bottom of the page when finished.

Next select controlled access.
This will require the user to enter a code after opening the login page.

Add any message that should appear on the login page.

Click the button at the bottom of the page.

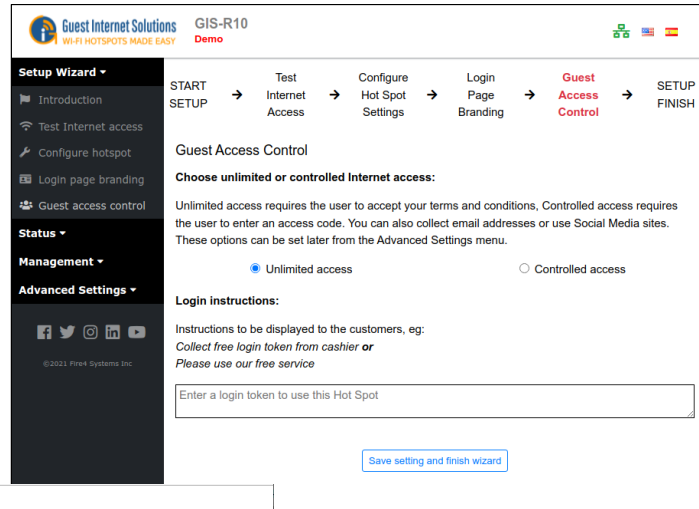

Guest Access Control

Choose unlimited or controlled Internet access:

Unlimited access requires the user to accept your terms and conditions, Controlled access requires the user to enter an access code. You can also collect email addresses or use Social Media sites. These options can be set later from the Advanced Settings menu.


☒ Unlimited access ☐ Controlled access

Login instructions:

Instructions to be displayed to the customers, eg:
Collect free login token from cashier or
Please use our free service

Enter a login token to use this Hot Spot

Save setting and finish wizard

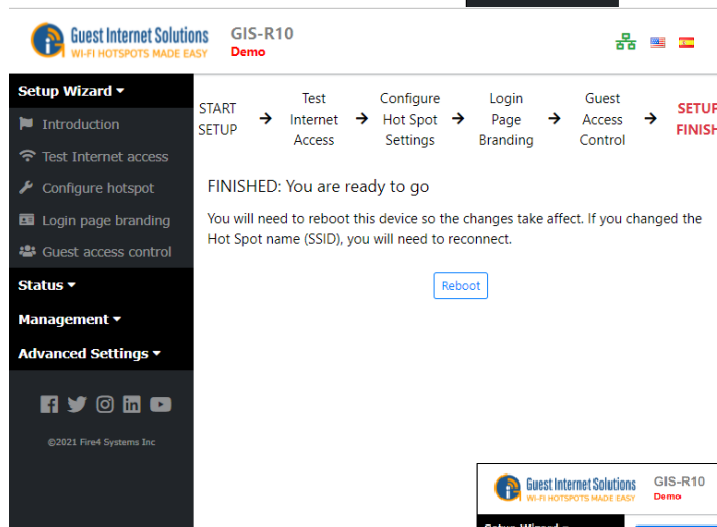

SETUP FINISH

FINISHED: You are ready to go

You will need to reboot this device so the changes take affect. If you changed the Hot Spot name (SSID), you will need to reconnect.

Reboot


Click the button to complete the setup process and reboot the unit.

After reboot, open a new browser tab and login as the administrator to complete the setup procedure

Aplogin.com

Username: admin

Password: set during setup

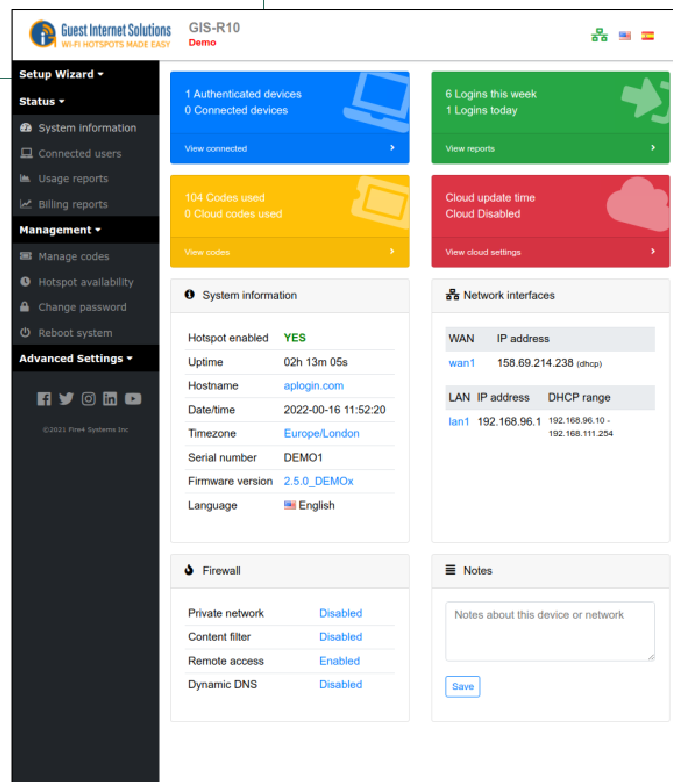

1 Authenticated devices
0 Connected devices
View connected

6 Logins this week
1 Logins today
View reports

104 Codes used
0 Cloud codes used
View codes

Cloud update time
Cloud Disabled
View cloud settings

System information

Hotspot enabled	YES
Uptime	02h 13m 05s
Hostname	aplogin.com
Date/Time	2022-00-16 11:52:20
Timezone	Europe/London
Serial number	DEMO1
Firmware version	2.5.0_DEMOx
Language	English

Network interfaces

WAN	IP address
wan1	158.69.214.238 (dhcp)

LAN	IP address	DHCP range
lan1	192.168.96.1	192.168.96.10 - 192.168.96.254

Firewall

Private network	Disabled
Content filter	Disabled
Remote access	Enabled
Dynamic DNS	Disabled



Notes

Notes about this device or network

Save

Enable the GIS-R4 cloud management so that it can be assigned to a cloud account later.

The cloud account will allow you to manage the service remotely and also print access code vouchers using the cloud.

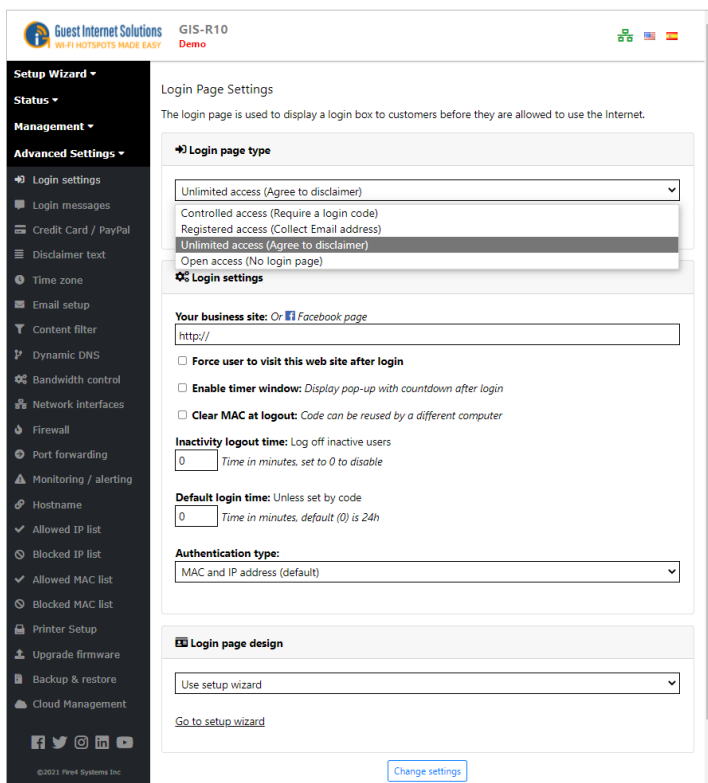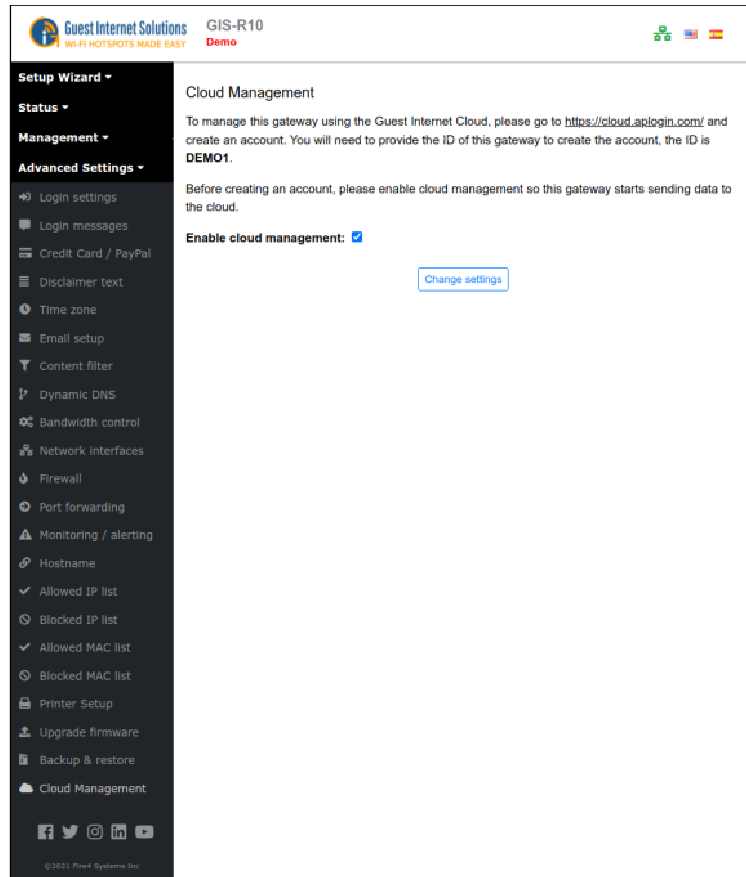

Consult the manual to make any changes to the login page or to create a customized login page.

Installing the WAP-3 wireless access point


The WAP-3 wireless access point is already pre-configured for public WiFi use as follows:

- Wireless name (SSID): **Hot Spot**
- No WPA encryption configured.

The WAP-3 wireless access point is connected to the GIS-R4 controller as shown in the diagram. The WAP-3 radiates the WiFi signal for mobile users and homes that have a STAR-4 kit installed.

A mobile phone can connect to the WAP-3 wireless access point WiFi signal within a short radius of less than 100m. A home with a STAR-4 kit installed can connect to the WAP-3 when the range is less than 1Km. All wireless connections must be line of sight; a tree or building will block the signal.

The WAP-3 product configuration will be adequate for most applications and so no configuration is required. Skip the configuration and go to the test section.

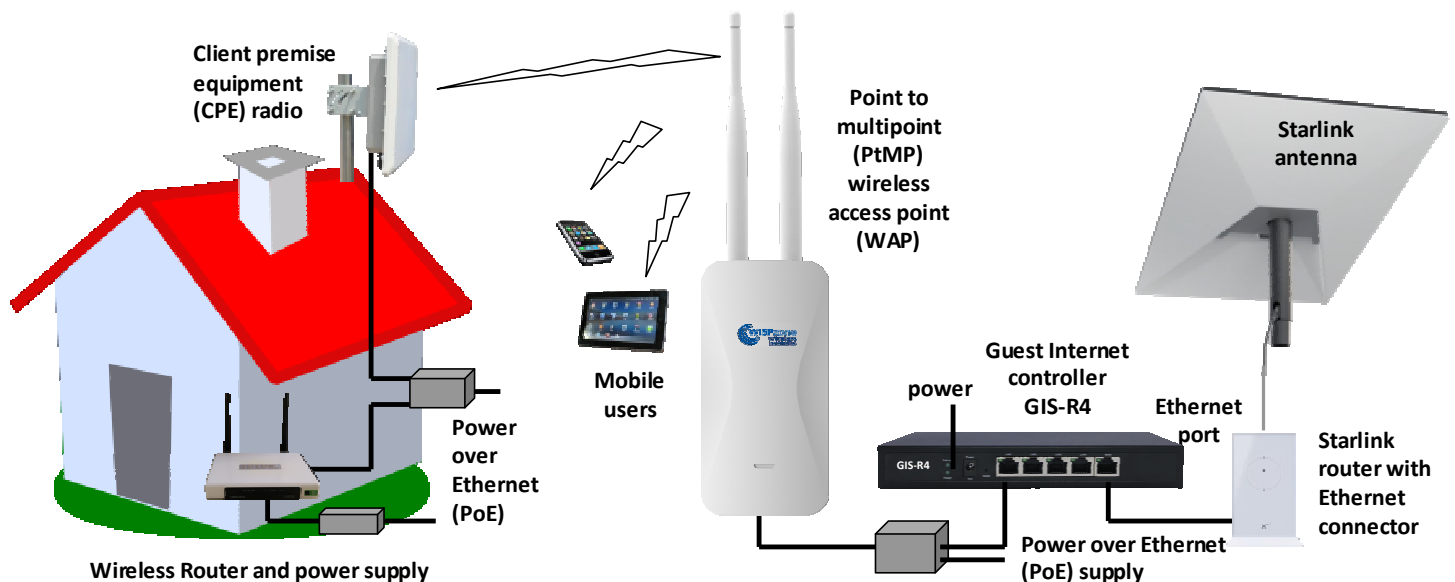


Configuring the WAP-3 wireless access point

The WAP-3 WiFi product is pre-configured for most community WiFi applications. However the configuration can be changed for different applications. This section describes how to change the configuration. The configuration has three sections.

- Change the wireless name that is transmitted, the SSID. The default is **Hot Spot**
- Add an encryption key to the wireless transmission.
- Change the password to login to the administrator pages.

If the password is forgotten then press the reset button to return to the factory setting and configure the product again.

To configure the WAP-3, connect a computer as shown in the figure. The computer LAN port must be configured for the static IP address 192.168.188.10.

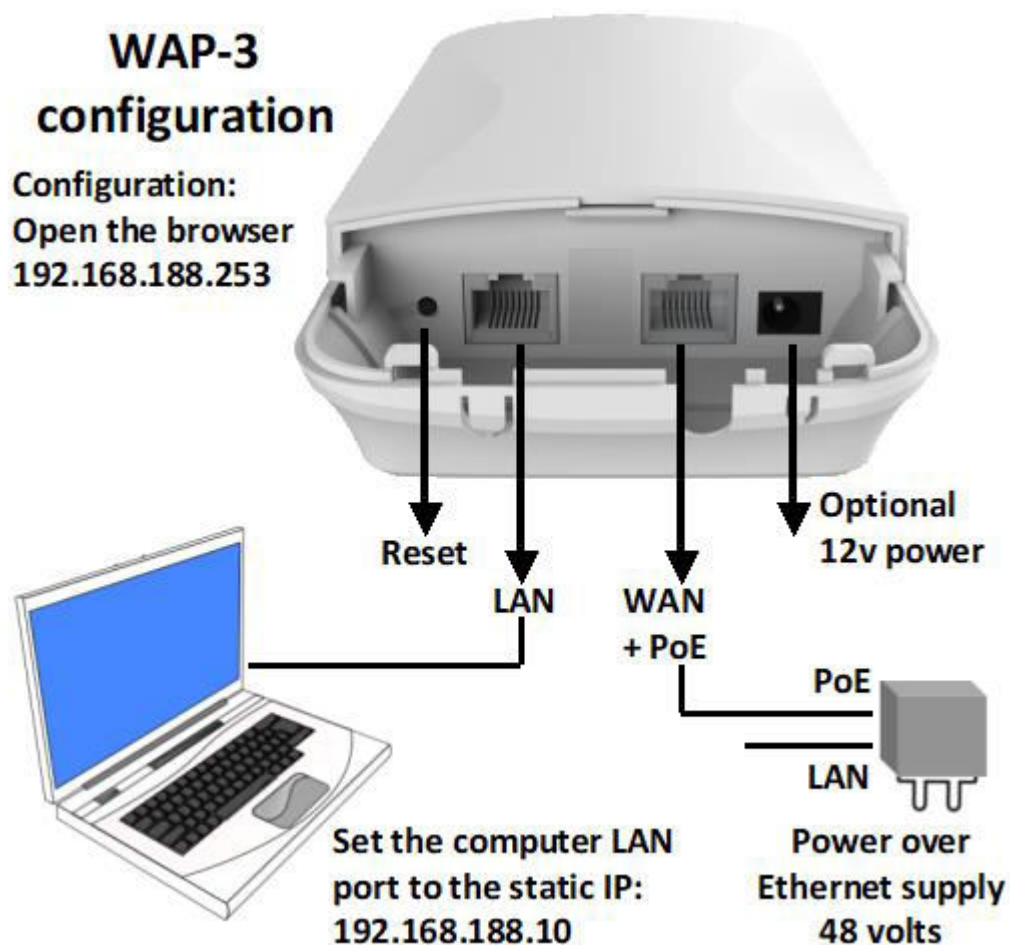


Open a browser tab and type the login page IP address: 192.168.188.253


The login page will open. Enter the password **admin** and click login.



After login the **home** page opens.

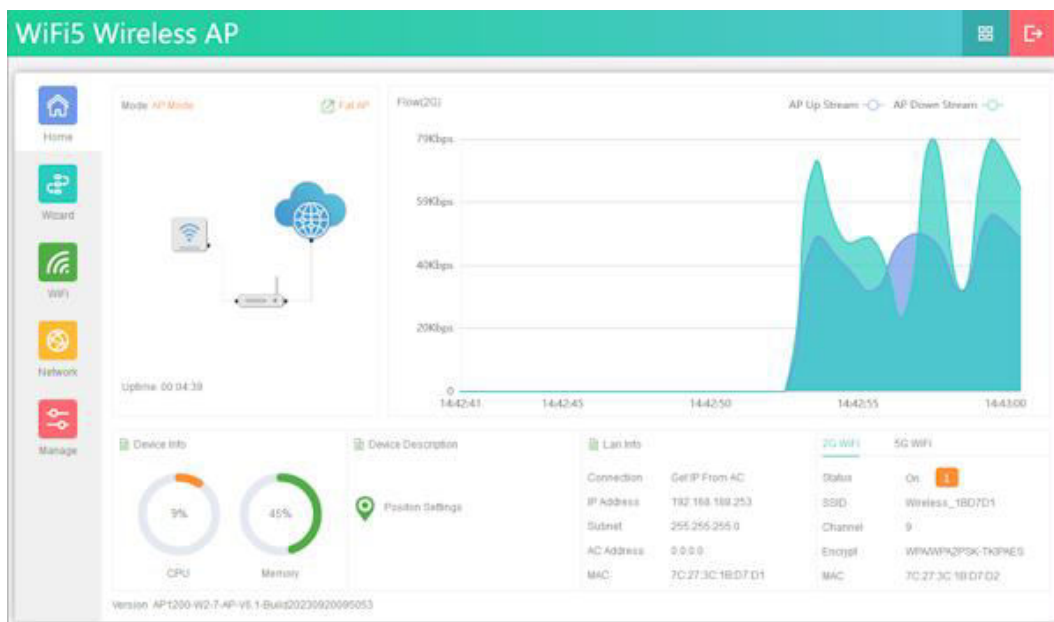


Click the **wizard** tab; verify that the WAP-3 is configured in **AP mode**

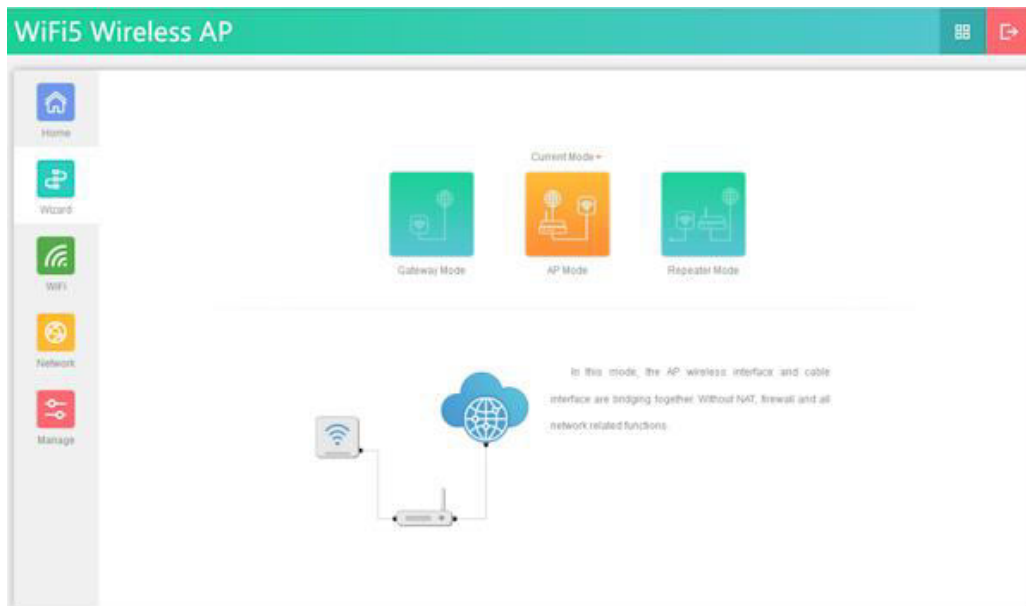


Click the **WiFi** tab.

On the **2G WiFi** menu (2.4 GHz) the wireless broadcast name (SSID) is set as **Hot Spot**, this can be changed by typing a new name. The **WiFi password** (WPA encryption key) is set to open so there is no encryption; this is the correct configuration for public WiFi Internet. The WiFi password can be changed to encryption. If this is changed then a password (encryption key) must be added in the box that appears below, the default password is 66666666. After a change click **Apply**.

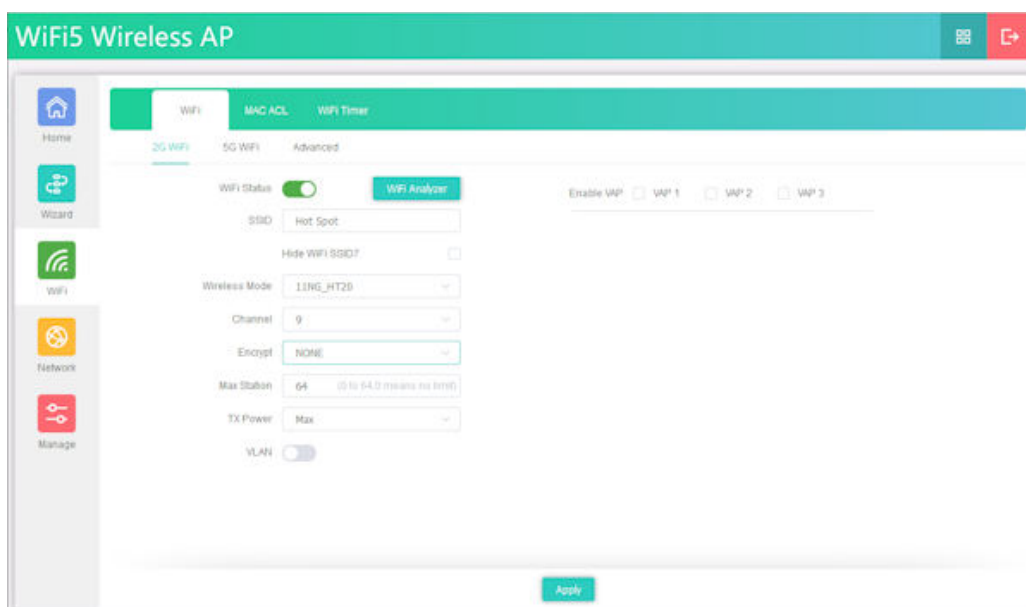


On the **5G WiFi** menu (5.8 GHz) the wireless broadcast name (SSID) is set as **Hot Spot**, this can be changed by typing a new name. The **WiFi password** (WPA encryption key) is set to open so there is no encryption; this is the correct configuration for public WiFi Internet. The WiFi password can be changed to encryption. If this is changed then a password (encryption key) must be added in the box that appears below, the default password is 66666666. After a change click **Apply**.

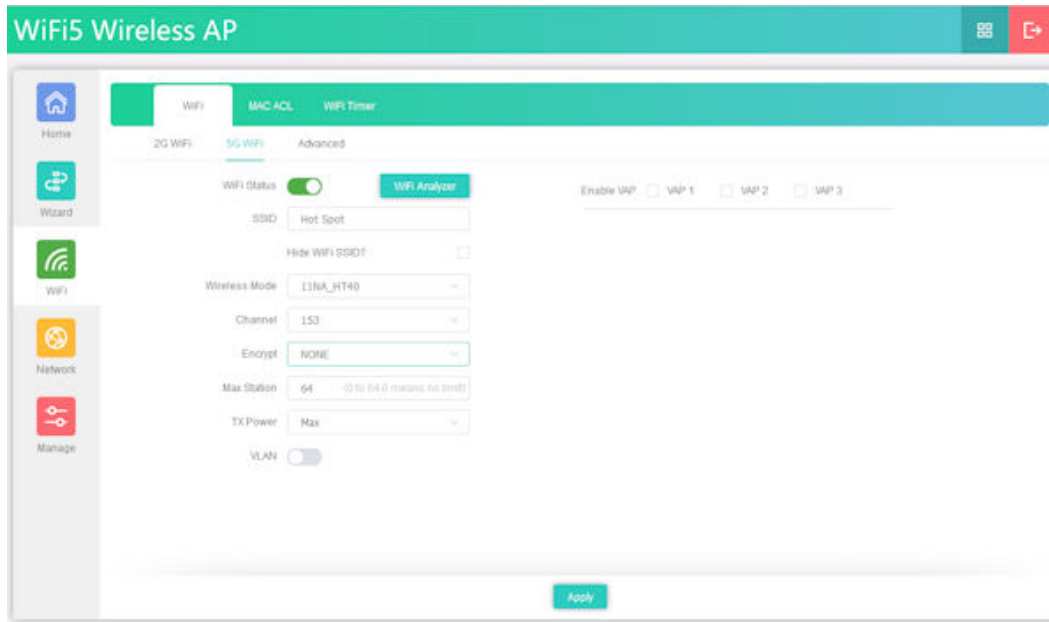

The screenshot shows the 'WiFi5 Wireless AP' configuration page with the '5G WiFi' tab selected. The left sidebar contains icons for Home, Wizard, WiFi, Network, and Manage. The main content area has tabs for WiFi, MAC ACL, and WiFi Timer. Under the WiFi tab, there are sub-tabs for 2G WiFi, 5G WiFi, and Advanced. The 5G WiFi sub-tab is active, showing the following settings: WiFi Status is turned on; SSID is 'Hot Spot'; Hide WiFi SSID? is unchecked; Wireless Mode is '11N_HT40'; Channel is '153'; Encrypt is 'NONE'; Max Station is '64'; TX Power is 'Max'; and VLAN is turned off. There is an 'Apply' button at the bottom right.

Click the **advanced** menu and select the **country region**, the default is set to the USA. Select your country from the drop down menu and then click **Apply**.

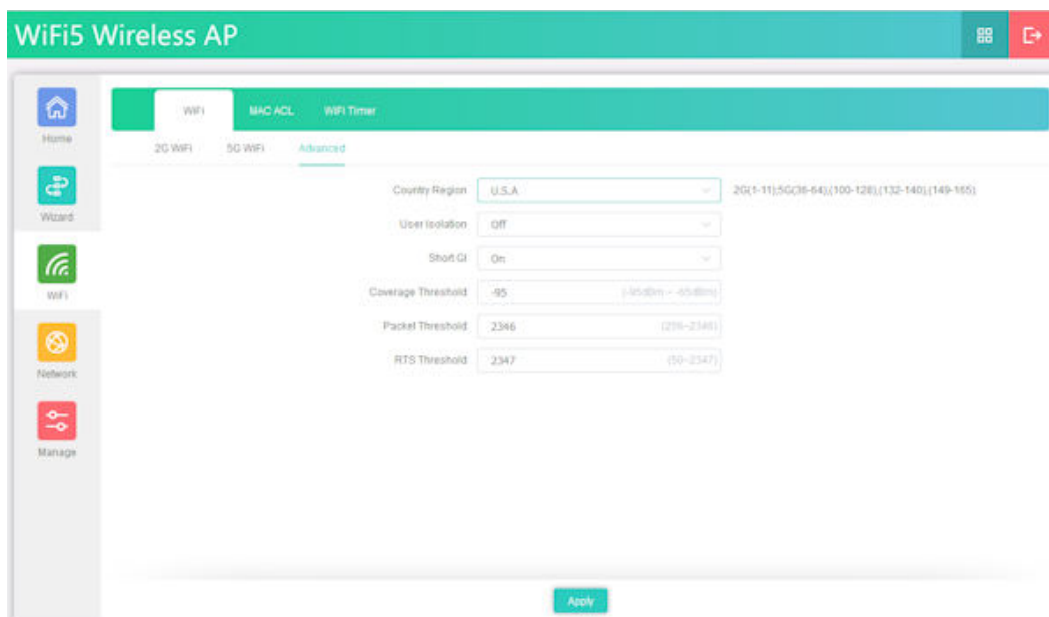


The screenshot shows the 'WiFi5 Wireless AP' configuration page with the 'Advanced' tab selected. The left sidebar is the same as the previous screenshot. The main content area has tabs for WiFi, MAC ACL, and WiFi Timer. Under the WiFi tab, there are sub-tabs for 2G WiFi, 5G WiFi, and Advanced. The Advanced sub-tab is active, showing the following settings: Country Region is 'U.S.A'; User Isolation is 'Off'; Short GI is 'On'; Coverage Threshold is '-95'; Packet Threshold is '2346'; and RTS Threshold is '2347'. There is an 'Apply' button at the bottom right.

The final step is to select the **Manage** tab and then select the **Modify Password** menu.



Enter the default password **admin** and then enter and confirm your new password. When the password has been entered click **Save**.

Note that if the password has been lost or forgotten then the WAP-3 will have to be reset to the factory default using the reset button and then reconfigured.

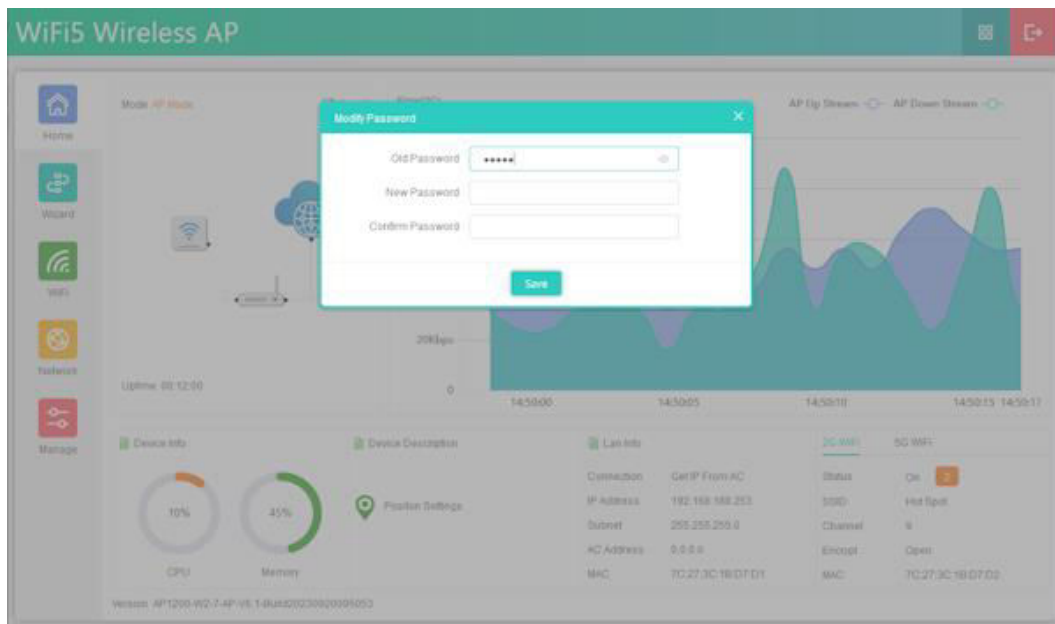

Click the right arrow at the top right of the screen to logout of the administration page. Change your computer LAN port IP setting to DHCP client.

Test the WAP-3 WiFi Internet access when connected to the GIS-R4 and a Starlink antenna

Connect the GIS-R4 WAN port to the Starlink Ethernet connector as shown in the diagram. Connect the WAP-3 WAN port to the PoE power supply and then to the GIS-R4 LAN1 port.

Connect the computer WiFi to the wireless name (SSID) **Hot Spot**.

Open a new browser tab, type the name of the Guest Internet login page and press enter: **aplogin.com**.

The login screen should open as shown in the diagram with a box to enter the login code. If there is no Internet access a message will display on the screen. If a login page does not open then go back to the step of testing the computer connection with the GIS-R4.




Two methods of voucher access code printing

Vouchers with access codes can be printed using the Guest Internet controller or using the Guest Internet Cloud to provide codes for a group of controllers.

- Access code vouchers that are printed using the Guest Internet controller can only be authenticated with that controller.
- Any controller in the cloud group can authenticate access code vouchers that are printed using the cloud for a group of controllers.

Before printing any vouchers, the voucher template must be prepared in the controller or the cloud, as described in a previous section.

The procedure to print vouchers is illustrated in the next diagram. Access codes are created using the controller software or the cloud group. The button to print the codes as vouchers is selected. Vouchers are sent to the letter printer attached to the computer. The printed pages are then cut into vouchers and the vouchers can be sold to community residents.

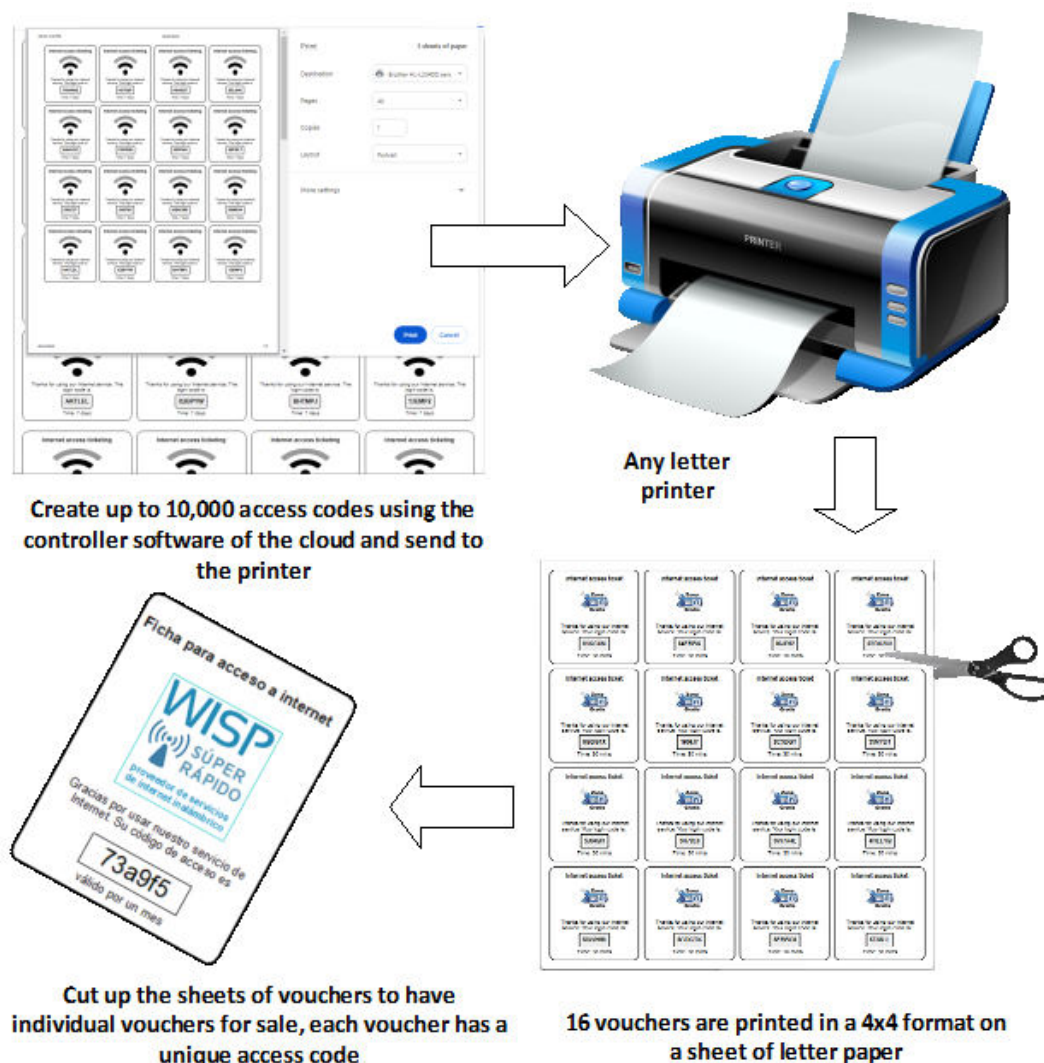


Printing access code vouchers using the Guest Internet controller.

Connect your computer to the Guest Internet controller wireless or LAN port and login as the admin using your password.

aplogin.com/admin

Click the 'manage codes' menu.

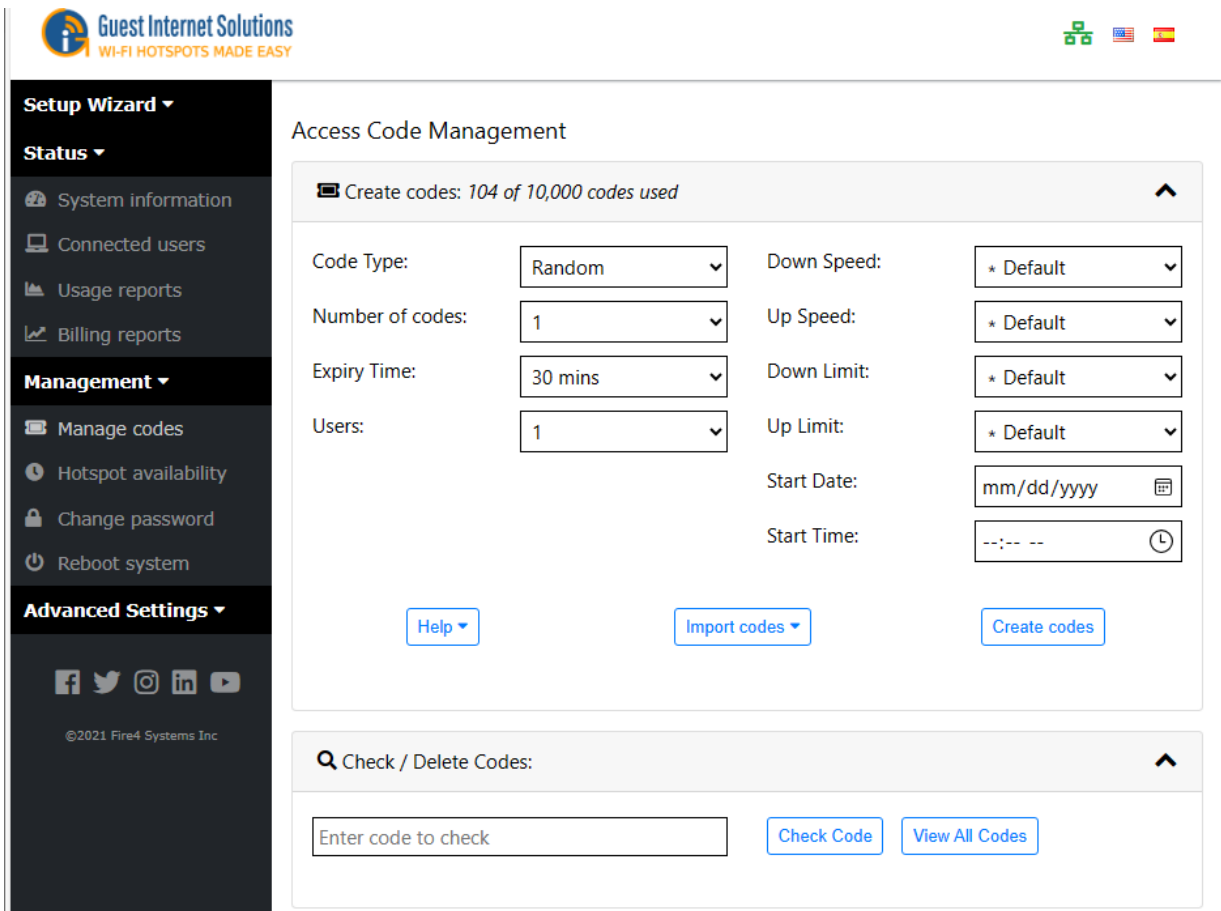

The screenshot shows the 'Access Code Management' page in the Guest Internet Solutions web interface. The left sidebar contains a navigation menu with sections: 'Setup Wizard', 'Status', 'Management', and 'Advanced Settings'. The 'Management' section is active, showing 'Manage codes' as the selected option. The main content area displays the 'Access Code Management' settings. At the top, it indicates 'Create codes: 104 of 10,000 codes used'. Below this, there are two columns of settings. The first column includes 'Code Type' (set to 'Random'), 'Number of codes' (set to '1'), 'Expiry Time' (set to '30 mins'), and 'Users' (set to '1'). The second column includes 'Down Speed' (set to '* Default'), 'Up Speed' (set to '* Default'), 'Down Limit' (set to '* Default'), 'Up Limit' (set to '* Default'), 'Start Date' (set to 'mm/dd/yyyy'), and 'Start Time' (set to '--:-- --'). At the bottom of the settings area, there are three buttons: 'Help', 'Import codes', and 'Create codes'. Below the settings area, there is a section for 'Check / Delete Codes' with a search bar labeled 'Enter code to check' and two buttons: 'Check Code' and 'View All Codes'.

To print vouchers, the code type is set to 'random'.

Select the number of codes (vouchers) to print.

Select the expiry time, 30 minutes to unlimited.

Select the number of users per code; this is set to 1 by default.


The following parameters are optional.

Select the maximum down and up data speeds that the code will allow.


Set the maximum down and up data byte quantity that the code will allow.

Set the start date and start time of the code if it is not to be used immediately.

Click the button 'create codes'.



Guest Internet Solutions
WI-FI HOTSPOTS MADE EASY



Setup Wizard ▾


Status ▾

- System information
- Connected users
- Usage reports
- Billing reports

Management ▾

- Manage codes
- Hotspot availability
- Change password
- Reboot system

Advanced Settings ▾



©2021 Fire4 Systems Inc

Access Code Management

Create codes: 204 of 10,000 codes used

Code Type:
Number of codes:
Expiry Time:
Users:

Down Speed:
Up Speed:
Down Limit:
Up Limit:

Start Date:
Start Time:

[Help](#)
[Import codes](#)
[Create codes](#)

New Codes:
[Print codes](#)
[Download CSV](#)

Code	Description	Time	Users	Down Kbps	Up Kbps	Down MB	Up MB	
CBNFBT		7d	1	2048	512	∞	∞	
71GLBH		7d	1	2048	512	∞	∞	
1T67BD		7d	1	2048	512	∞	∞	
JA1T3C								
8D0009								
DTJESX								
8PT04X								

Print

Total: 7 sheets of paper

Printer

Copies

Layout

☒ Portrait

☐ Landscape

Pages


☒ All

☐ Odd pages only

☐ Even pages only

[More settings](#)

[Print using system dialog... \(Ctrl+Shift+P\)](#)



Print

Cancel

When the codes have been generated then check that the printer is connected and click the button 'print codes' to generate the vouchers.


Then click the 'print' button to send to the printer.

Print access code vouchers using your Guest Internet Cloud account.


Connect your computer to the Internet and login to your guest Internet cloud account. A previous section described the process to create the Cloud account.

<https://cloud.aplogin.com/>

Click the 'codes' menu then select the group that the codes are to be generated for. All Guest Internet controllers assigned to that group will authenticate the codes.

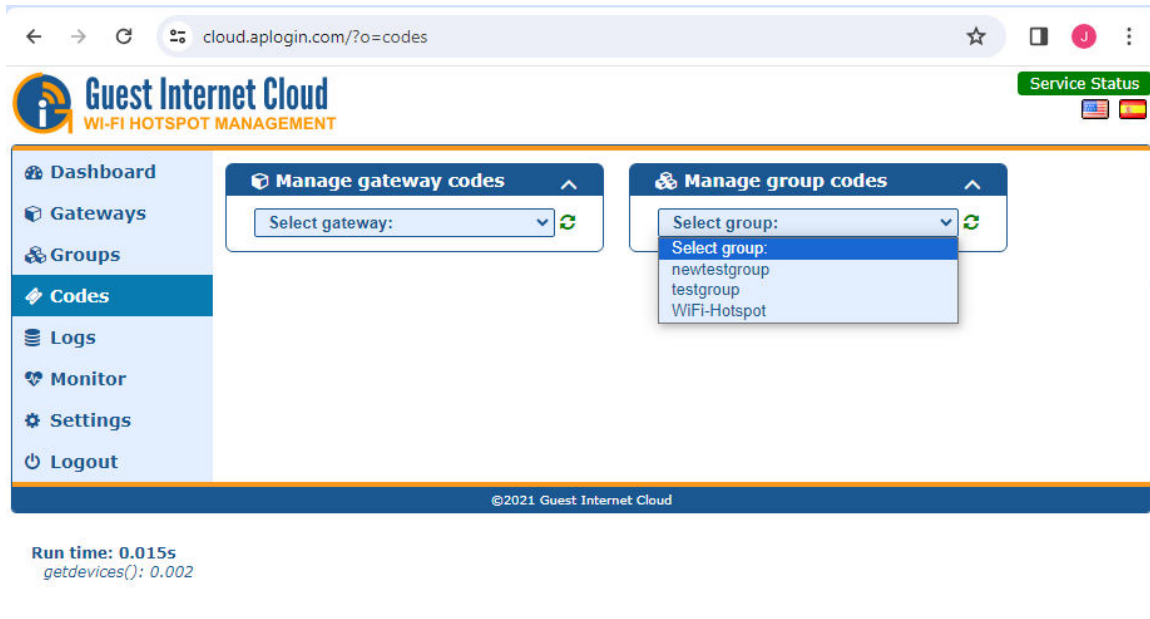

The code generation page is then displayed.

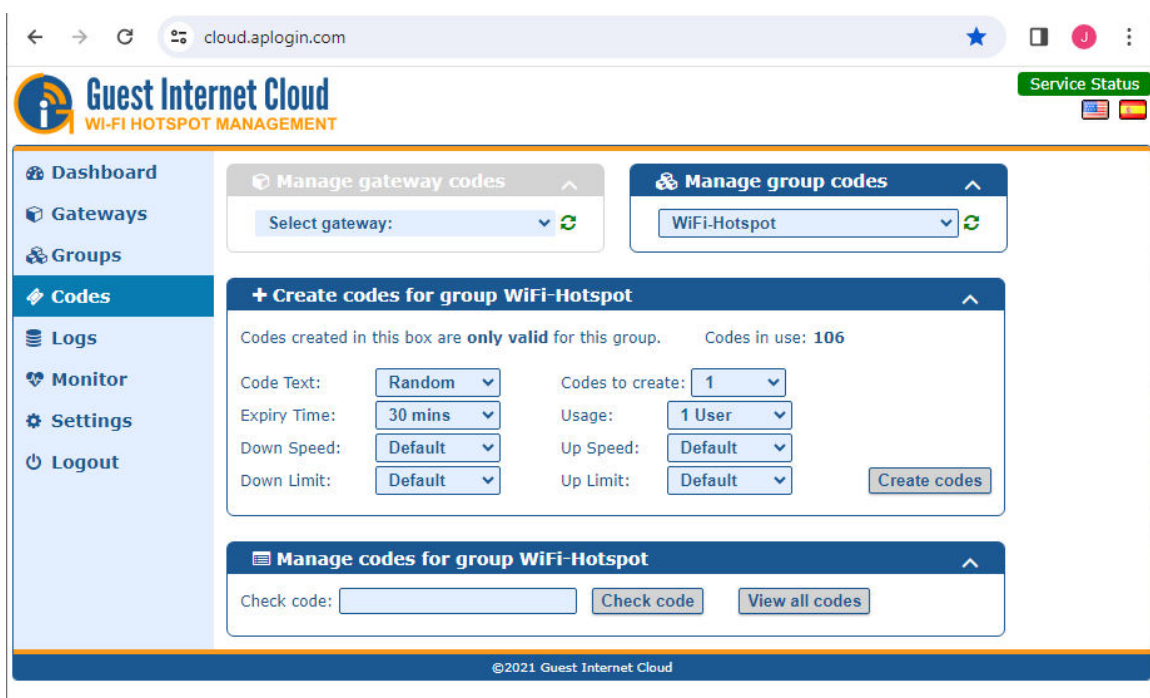

To print vouchers, the code type is set to 'random'.

Select the number of codes (vouchers) to print.

Select the expiry time, 30 minutes to unlimited.


Select the number of users per code; this is set to 1 by default.

The following parameters are optional:

Select the maximum down and up data speeds that the code will allow.

Set the maximum down and up data byte quantity that the code will allow.

Click the button 'create codes'.

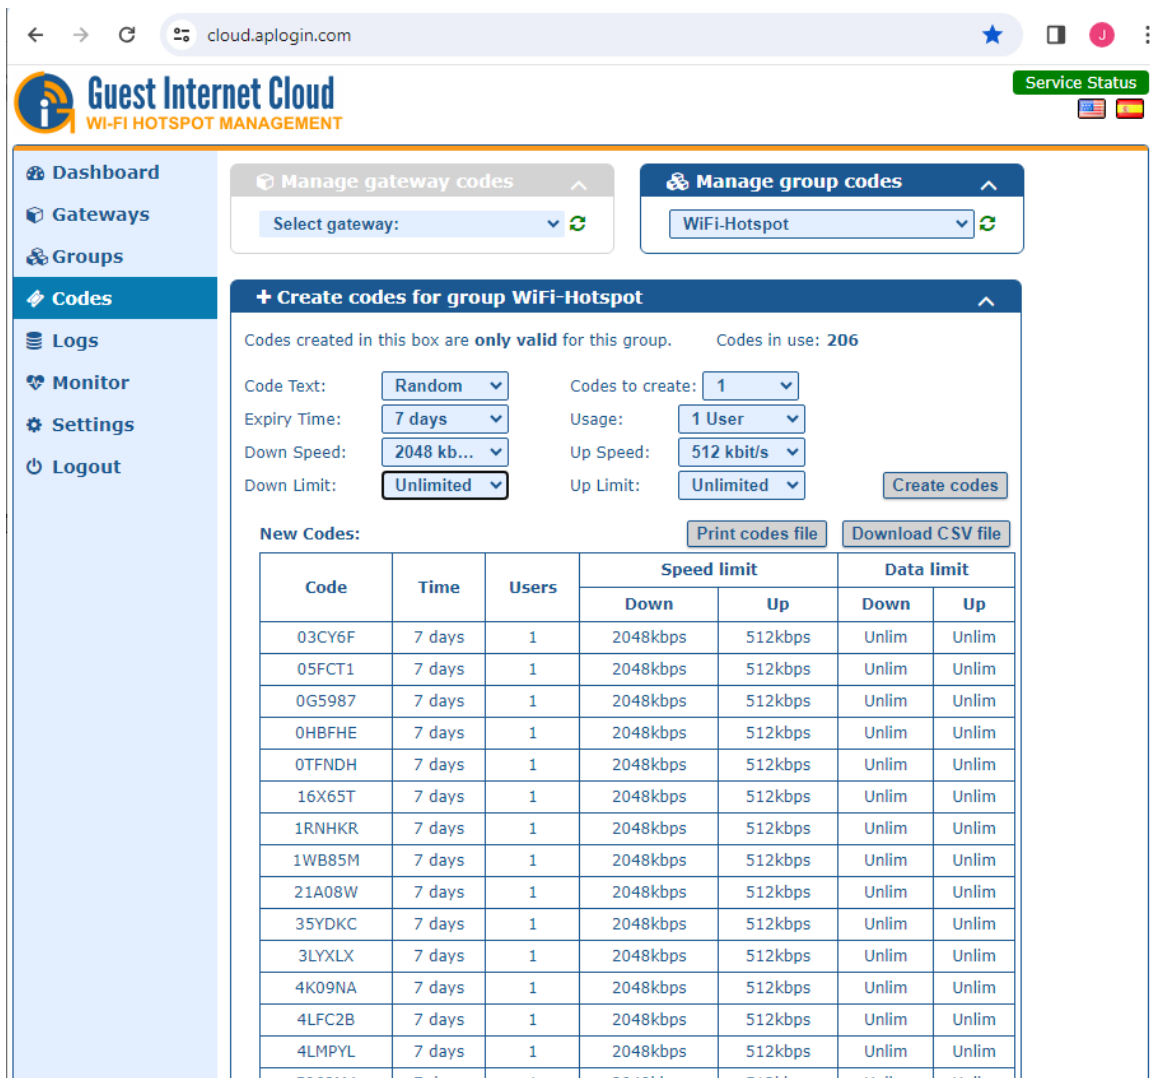

Service Status

Dashboard

Gateways

Groups

Codes

Logs

Monitor

Settings

Logout

Manage gateway codes

Select gateway:

Manage group codes

WiFi-Hotspot

+ Create codes for group WiFi-Hotspot

Codes created in this box are **only valid** for this group. Codes in use: 206

Code Text: Random

Codes to create: 1

Expiry Time: 7 days

Usage: 1 User

Down Speed: 2048 kb/s

Up Speed: 512 kbit/s

Down Limit: Unlimited

Up Limit: Unlimited

Create codes

New Codes:

Print codes file

Download CSV file

Code	Time	Users	Speed limit		Data limit	
			Down	Up	Down	Up
03CY6F	7 days	1	2048kbps	512kbps	Unlim	Unlim
05FCT1	7 days	1	2048kbps	512kbps	Unlim	Unlim
0G5987	7 days	1	2048kbps	512kbps	Unlim	Unlim
0HBFHE	7 days	1	2048kbps	512kbps	Unlim	Unlim
0TFNDH	7 days	1	2048kbps	512kbps	Unlim	Unlim
16X65T	7 days	1	2048kbps	512kbps	Unlim	Unlim
1RNHKKR	7 days	1	2048kbps	512kbps	Unlim	Unlim
1WB85M	7 days	1	2048kbps	512kbps	Unlim	Unlim
21A08W	7 days	1	2048kbps	512kbps	Unlim	Unlim
35YDKC	7 days	1	2048kbps	512kbps	Unlim	Unlim
3LYXLX	7 days	1	2048kbps	512kbps	Unlim	Unlim
4K09NA	7 days	1	2048kbps	512kbps	Unlim	Unlim
4LFC2B	7 days	1	2048kbps	512kbps	Unlim	Unlim
4LMPYL	7 days	1	2048kbps	512kbps	Unlim	Unlim
5068M4	7 days	1	2048kbps	512kbps	Unlim	Unlim

Click the button 'print codes file'. The vouchers are formatted and ready to be printed on the attached letter printer.

The screenshot shows a web browser window at cloud.aplogin.com/?print=d5459ae65b184811826332f59b373600.csv. The main content area displays a 4x4 grid of 16 'Internet access ticket' vouchers. Each voucher includes the 'Zona WiFi Gratis' logo, a thank you message, a unique login code (e.g., 83CY6F, 06FCT1, 0G9867, 0HBFHE), and a validity period of 7 days. A print settings panel on the right allows users to print 7 sheets of paper to a Brother HL-L2340D series printer, with options for pages, copies, and layout. A 'Print' button is visible at the bottom right of the panel.

Click the 'Print' button to send to the printer.

After printing the vouchers can be cut up and distributed.

